


# Door Factory 2023

## Create New Trim Profiles


### 01 Open an Existing RevitWorks Trim Profile

- Go to the Door Factory component installation directory, sub folder "Trim Profiles".
- Default path: C:\Program Data\RevitWorks\Door Factory 2023\Components ("Metric" or "Imperial")
- Open an existing trim profile.

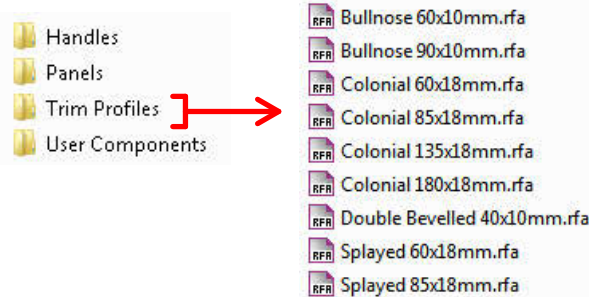


### 02 Amend Profile

- Under "Visibility Graphics" tick "Show annotation categories in this view"

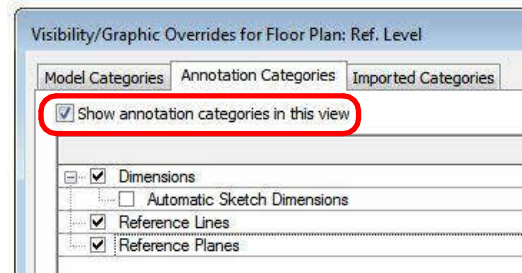

- Draw new desired profile (or cut and paste from another profile family).
- Ensure that the new profile:
  1. Is in the same quadrant as shown.
  2. Is oriented the same way as shown.
  3. Touches the intersection of the reference planes as shown.

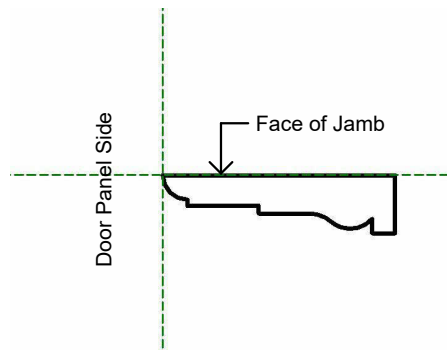

### 03 Turn off Annotations and Saves

- Under "Visibility Graphics" untick "Show annotation categories...". This will ensure that the reference planes are not shown in the preview icon.
- "Saveas" new profile into the "Trim Profiles" directory and give it a new name.

#### Important Notes

- Do not add more family types, or change the family type name "Trim".
- Do not delete the copyright parameter, the Door Factory requires this to know that this is a Door Factory component.
- Do not use any length parameters. If different lengths are required, create a new trim with a different length and name appropriately.

### 04 Run the Door Factory

- Your new profile will now be selectable under the "Trim" tab "Custom Profile" pull-down.

