


Door Factory 2025

Create New Trim Profiles


① Open an Existing RevitWorks Trim Profile

- Go to the Door Factory component installation directory, sub folder "Trim Profiles".
- Default path: C:\Program Data\RevitWorks\Door Factory 2025\Components ("Metric" or "Imperial")
- Open an existing trim profile.

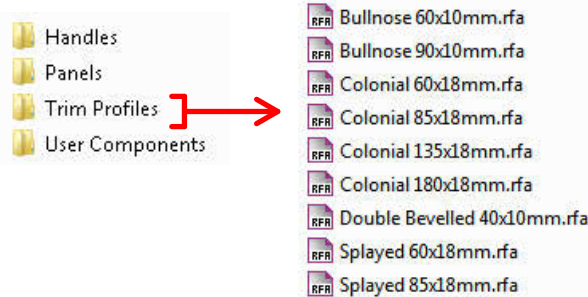


② Amend Profile

- Under "Visibility Graphics" tick "Show annotation categories in this view"

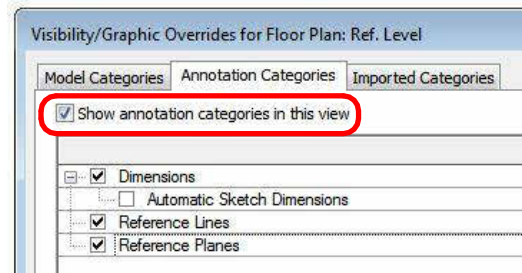

- Draw new desired profile (or cut and paste from another profile family).
- Ensure that the new profile:
 1. Is in the same quadrant as shown.
 2. Is oriented the same way as shown.
 3. Touches the intersection of the reference planes as shown.

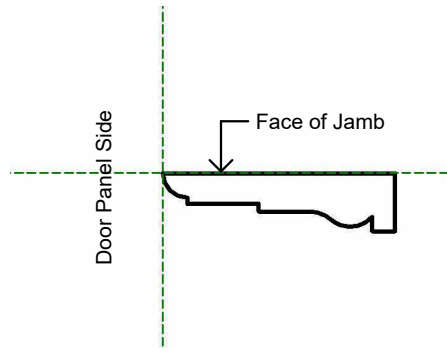

③ Turn off Annotations and Saveas

- Under "Visibility Graphics" untick "Show annotation categories...". This will ensure that the reference planes are not shown in the preview icon.
- "Saveas" new profile into the "Trim Profiles" directory and give it a new name.

Important Notes

- Do not add more family types, or change the family type name "Trim".
- Do not delete the copyright parameter, the Door Factory requires this to know that this is a Door Factory component.
- Do not use any length parameters. If different lengths are required, create a new trim with a different length and name appropriately.

④ Run the Door Factory

- Your new profile will now be selectable under the "Trim" tab "Custom Profile" pull-down.

