

## RevitWorks Door Factory: Multiple User Configuration

Recommended configuration for the RevitWorks Door Factory Premium.

For different versions: substitute <2019> with the relevant version number.

The RevitWorks Door Factory has a multitude of components and settings that can be centralised to allow for the following:

- **Multiple users can access the same components (Panels, handles etc).**
- **Shared Parameter mapping settings can be setup and maintained throughout the company without having to continually change each users settings.**
- **These "customisable" components and settings etc can be part of the company servers backup routine.**

As well as this, the Door Factory relies on certain files that that reside on each users PC; these files can be copied between PC's:

- **Auto Activation**
- **Default Values**
- **Default Naming**
- **Default Orientation**

## Recommendations:

### Centralise Family Components

### Centralise Parameter Mapping Settings

### Centralise Clearance Diagrams

### Copy Default Values to users PC's

### Copy Default Naming to users PC's

### Copy Default Orientation to users PC's

### Auto Activation

Default Settings
✕

---

Door Factory Component Location

Metric Components  
 ...

Imperial Components  
 ...

Parameter Mapping

Map Parameters

Conversion File Location  
 ... Edit

Clearance Diagrams

Allow diagrams to be added to doors

Clearance Diagram Location  
 ...

Default Values


Metric (millimeters)  Imperial ( decimal inches)

PARAMETER NAME	DEFAULT	COMMENTS
<b>ACTION</b>		
Pivot Offset	60	For pivot doors
<b>JAMB</b>		
Jamb Depth Specified	100	For all jamps when jamb doesnt match the wall thickness
Jamb Width	20	For all jamps
Jamb Head Width Specified	40	For jamb head when different than side jamb
Jamb Protrusion Past Wall	20	For Jamps that wrap the wall
Doorstop Width	20	For rebated and stop jamps
Doorstop Depth Specified	40	For stop jamps when not centred on jamb
<b>PANEL</b>		
Panel Protrusion into Opening	0	For all Sliding doors except for reverse sliders
Panel Width	810	For all doors
Secondary Panel Width	810	For standard double doors
Non Equal Primary Panel Width	810	For curtain panel double doors
Panel Height	1980	For all doors

Default Orientation
Default Nami
Help
Cancel
OK

## Centralising Family Components

1. During the installation process, all of the Door Factory family components (panels, handles, trims and user components) get installed to C:\ProgramData\RevitWorks\Door Factory 2019\Components
2. Copy this component directory (and all subdirectories and files within it) onto a networked location of your choice within your company server.
3. Within the "Default Settings", change the Door Factory component locations to your new location (metric and imperial sub-directories) as below:

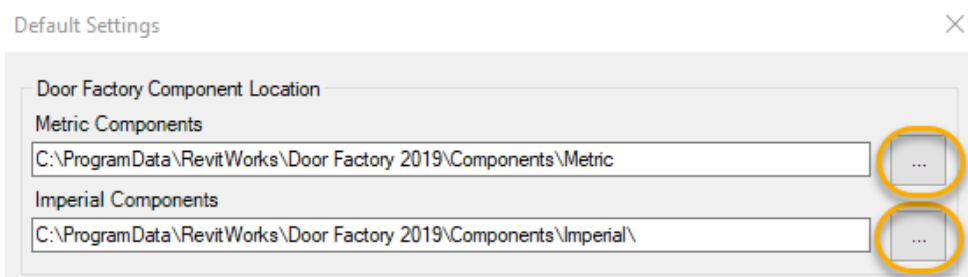

Alternatively, you can manually change the directory setting files by editing the stored location within the following text files:


C:\ProgramData\RevitWorks\Door Factory 2019\ComponentDirectory\_M.txt for the metric component location

C:\ProgramData\RevitWorks\Door Factory 2019\ComponentDirectory\_I.txt for the imperial component location

You can update other users by overwriting the text files (as above) on their PCs with your updated ones.

DO NOT move or rename these .txt files, the Door Factory relies on them.


## Centralising Parameter Mapping Settings

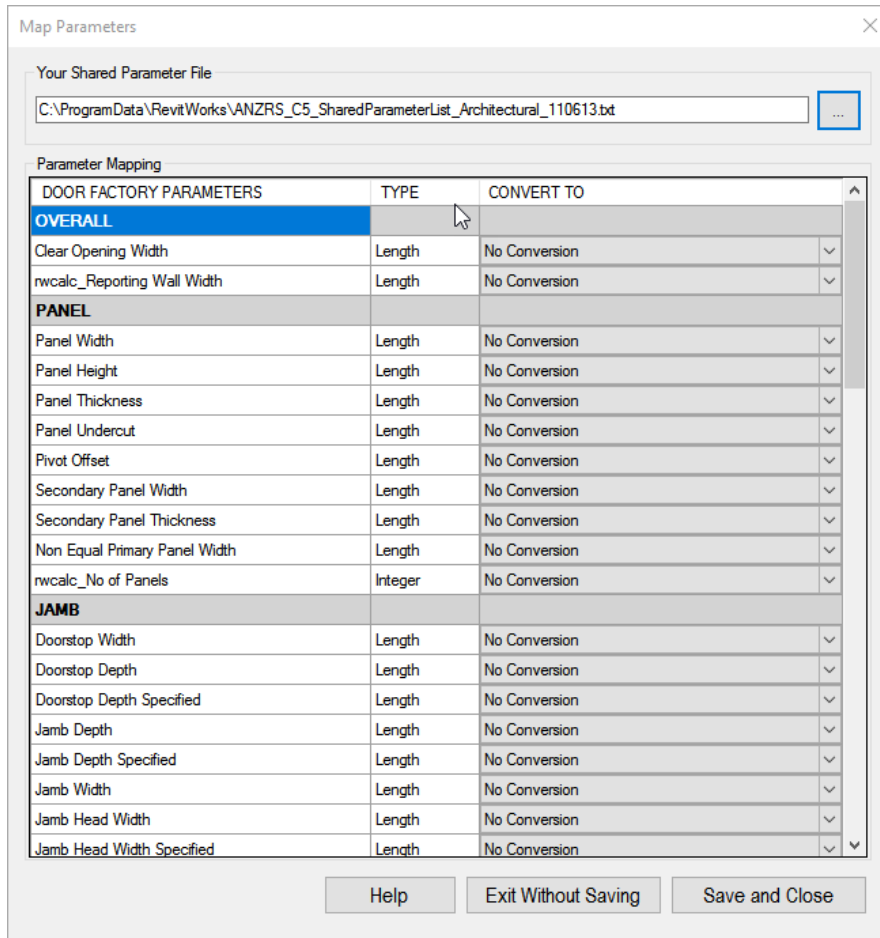

If/when you have mapped the Door Factory Parameters to your Shared Parameter file and names, all of those settings are saved within the following file:

C:\ProgramData\RevitWorks\Door Factory 2019\DF Shared Parameter Conversion\DF Shared Parameter Conversion.txt

1. Copy this .txt file directory onto a networked location of your choice within your company server.
2. Go to the Door Factory "Default Settings" and amend the "Conversion File Location" to point at the new location of the .txt file as below:

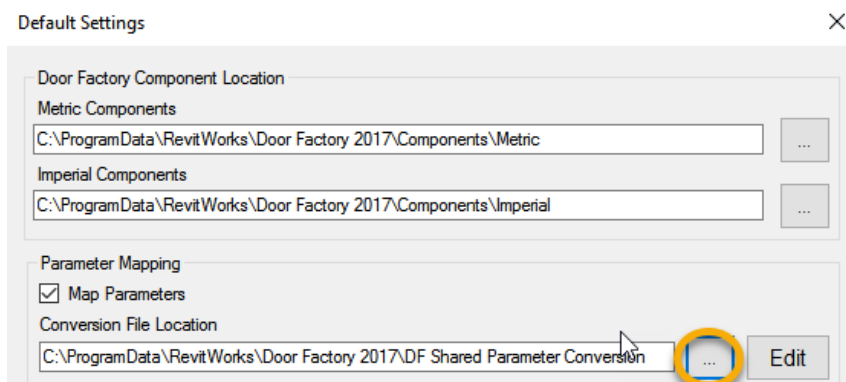


When you update this file location, the Door Factory saves that location within the following text file:

C:\ProgramData\RevitWorks\Door Factory 2019\ SPC File Location.txt

You can update other users by overwriting the text file (as above) on their PCs with your updated one. DO NOT move or rename this .txt file, the Door Factory relies on it.

## Centralising Clearance Diagrams

1. During the installation process, all of the Door Factorys clearance diagrams get installed to C:\ProgramData\RevitWorks\Door Factory 2019\Clearance Diagrams
2. Copy this directory (and all subdirectories and files within it) onto a networked location of your choice within your company server.
3. Within the "Default Settings", change the Door Factory Clearance Diagrams location to your new location as below:

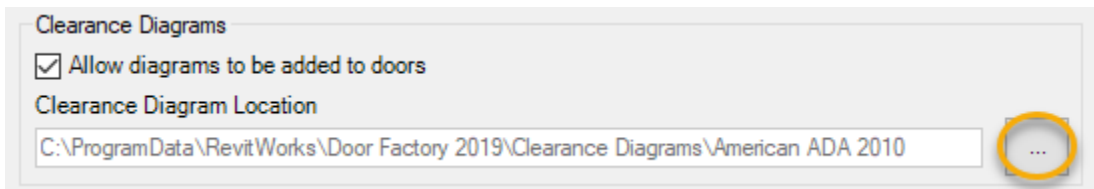

Alternatively, you can manually change the directory setting files by editing the stored location within the following text files:

C:\ProgramData\RevitWorks\Door Factory 2019\ClearancesDirectory.txt

You can update other users by overwriting the text files (as above) on their PCs with your updated one.

DO NOT move or rename these .txt files, the Door Factory relies on them.

## Copying Default Values

Default Values

Metric (millimeters)  Imperial ( decimal inches)

PARAMETER NAME	DEFAULT	COMMENTS
<b>ACTION</b>		
Pivot Offset	60	For pivot doors
<b>JAMB</b>		
Jamb Depth Specified	100	For all jambs when jamb doesnt match the wall thickness
Jamb Width	20	For all jambs
Jamb Head Width Specified	40	For jamb head when different than side jamb
Jamb Protrusion Past Wall	20	For Jambs that wrap the wall
Doorstop Width	20	For rebated and stop jambs
Doorstop Depth Specified	40	For stop jambs when not centred on jamb
<b>PANEL</b>		
Panel Protrusion into Opening	0	For all Sliding doors except for reverse sliders
Panel Width	810	For all doors
Secondary Panel Width	810	For standard double doors
Non Equal Primary Panel Width	810	For curtain panel double doors
Panel Height	1980	For all doors


When you update the Default Values within the Default Settings dialog, the Door Factory saves these values within the following text files:

C:\ProgramData\RevitWorks\Door Factory 2019\DefaultValues\_M.txt for the metric default values

C:\ProgramData\RevitWorks\Door Factory 2019\DefaultValues\_I.txt for the imperial default values

You can update other users by overwriting the text files (as above) on their PCs with your updated ones. DO NOT move or rename these .txt files, the Door Factory relies on them.

## Copying Default Names

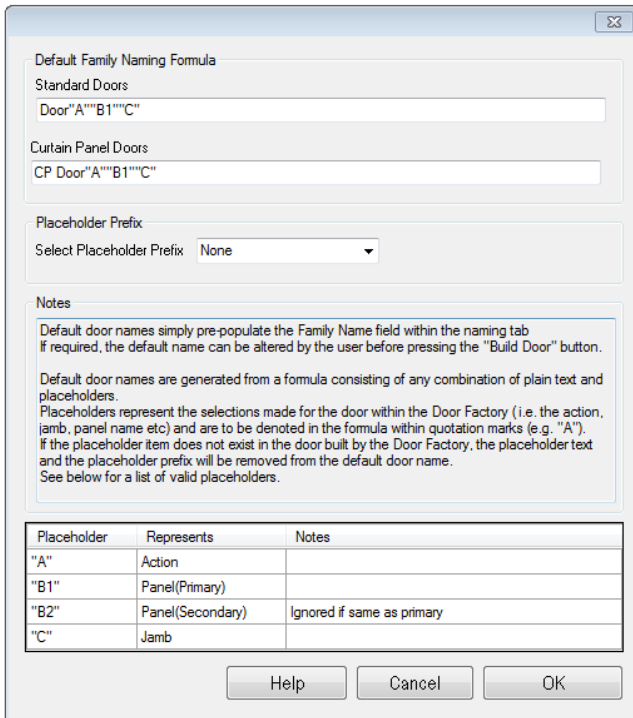


When you update the default naming formula, the Door Factory saves these values within the following text file:

C:\ProgramData\RevitWorks\Door Factory 2019\  
**Default\_names.txt**

You can update other users by overwriting the text file (as above) on their PCs with your updated one. DO NOT move or rename this .txt file, the Door Factory relies on it.

## Copying Default Orientation

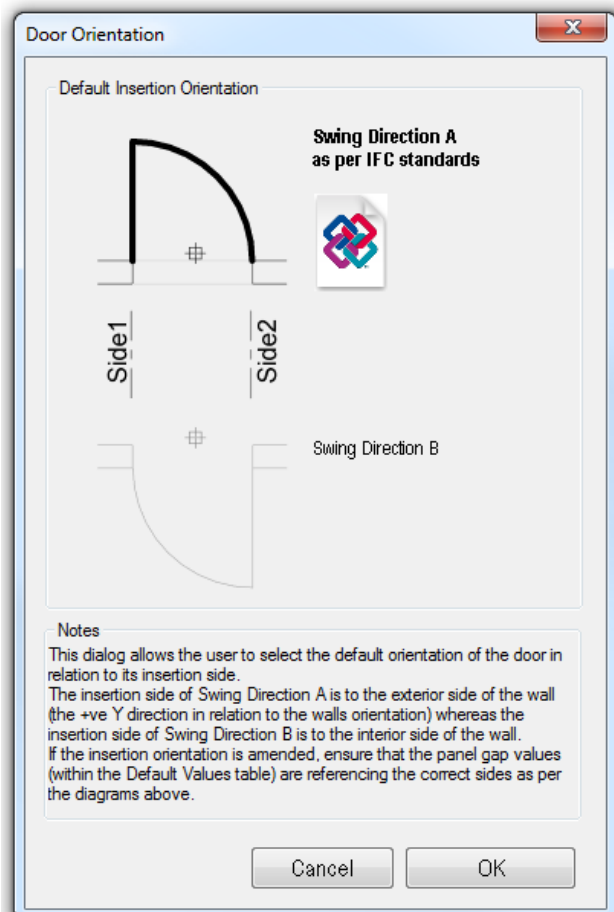

When you update the default orientation, the Door Factory saves these values within the following text file:

C:\ProgramData\RevitWorks\Door Factory 2019\  
**Default\_orientation.txt**

You can update other users by overwriting the text file (as above) on their PCs with your updated one. DO NOT move or rename this .txt file, the Door Factory relies on it.

### Important!

If unchanged, the door factory orientation defaults to Swing Direction A. We recommend that you use this orientation since it ensures compliance with IFC standards.

## Auto Activation

On first use, the Door Factory requires activation. The easiest way of activating multiple users is to edit the following file:

C:\ProgramData\RevitWorks\Door Factory 2019\ **autoActivationKey.xml**

*If you haven't got a .xml editor, just edit it within a text editor (i.e. Notepad).*

To Edit, copy/paste your activation key carefully *within the speech marks*, overwriting the "Insert your activation key between these speech marks' text.

### **Example:**

```
<?xml version="1.0" encoding="utf-8"?>
<root>
  <autoActivationKey activationKey="Insert your activation key between these speech marks" />
</root>
```

### **becomes:**

```
<?xml version="1.0" encoding="utf-8"?>
<root>
  <autoActivationKey activationKey="xxxxx-xxxxx-xxxxx-xxxxx-xxxxx-xxxxx" />
</root>
```

You can update other users by overwriting the xml file (as above) on their PCs with your updated one